


Removing

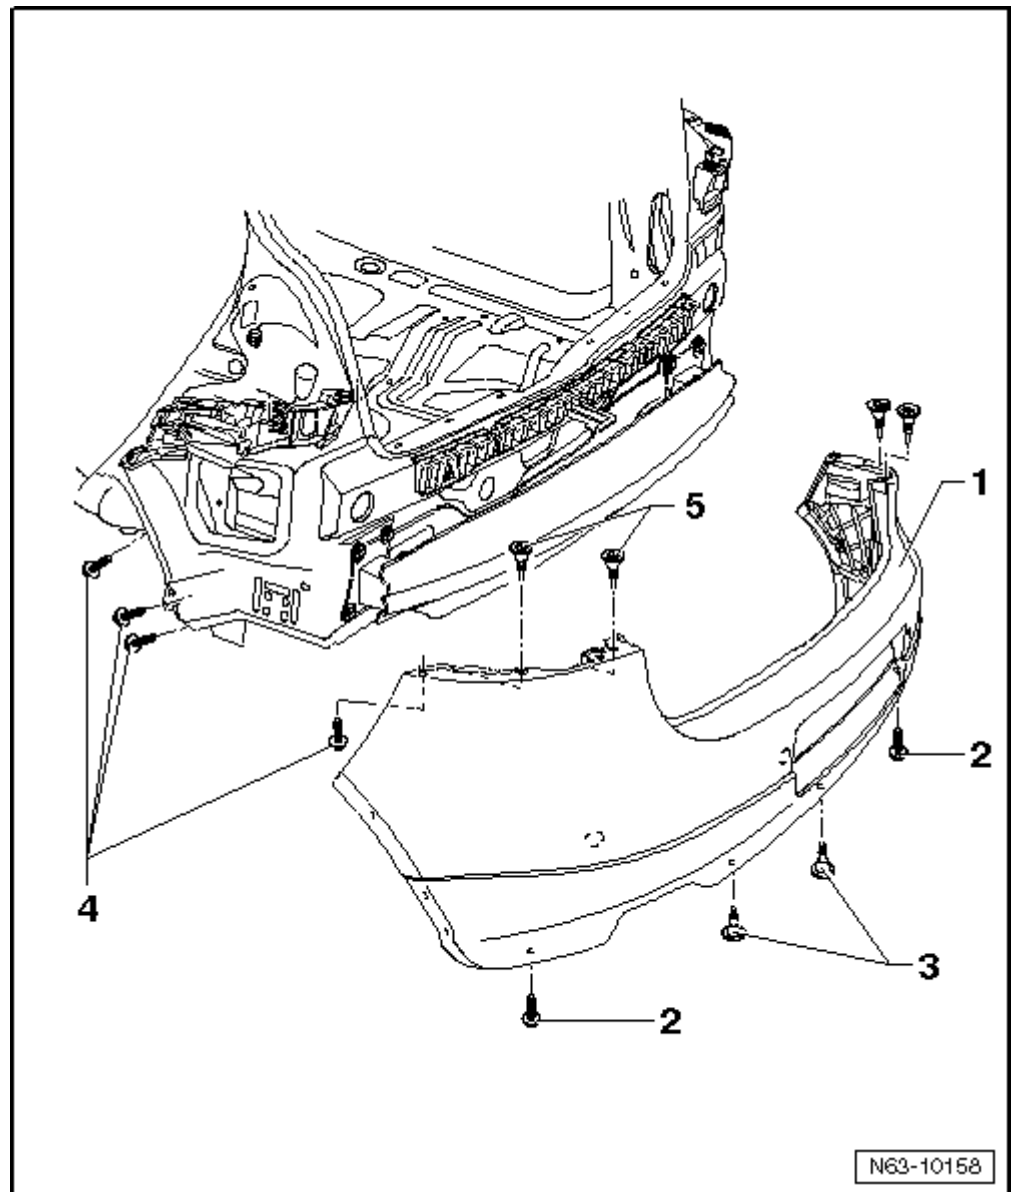

- Remove tail lights → [Rep. Gr.94](#).
- Remove bolts -4- on left and right in area of wheel housing liner.
- From below, remove bolts -2- and -3-.
- Unscrew bolts -5- from above on left and right beneath tail lights.

Further dismantling requires the help of a second mechanic.

- With help of a second mechanic pull cover -1- parallel out of guides.
- Separate connectors for existing electrical components of number plate light → [Rep. Gr.94](#) and, if fitted, → [Rep. Gr.94](#).